



intersystems

Stainless Steel
Galvanized
Painted

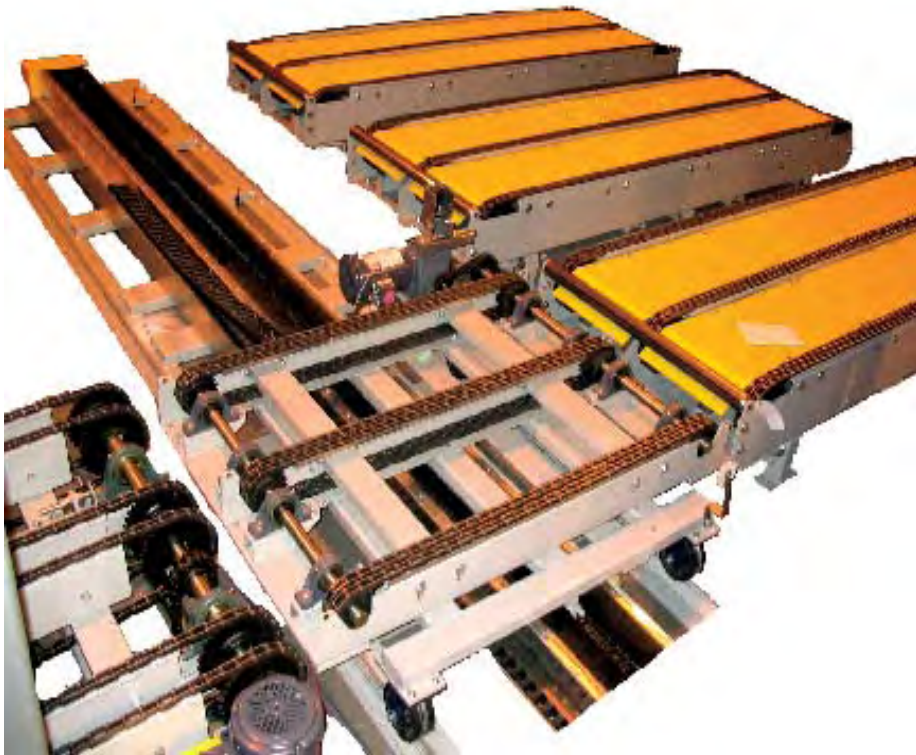

Polished
Stainless Steel

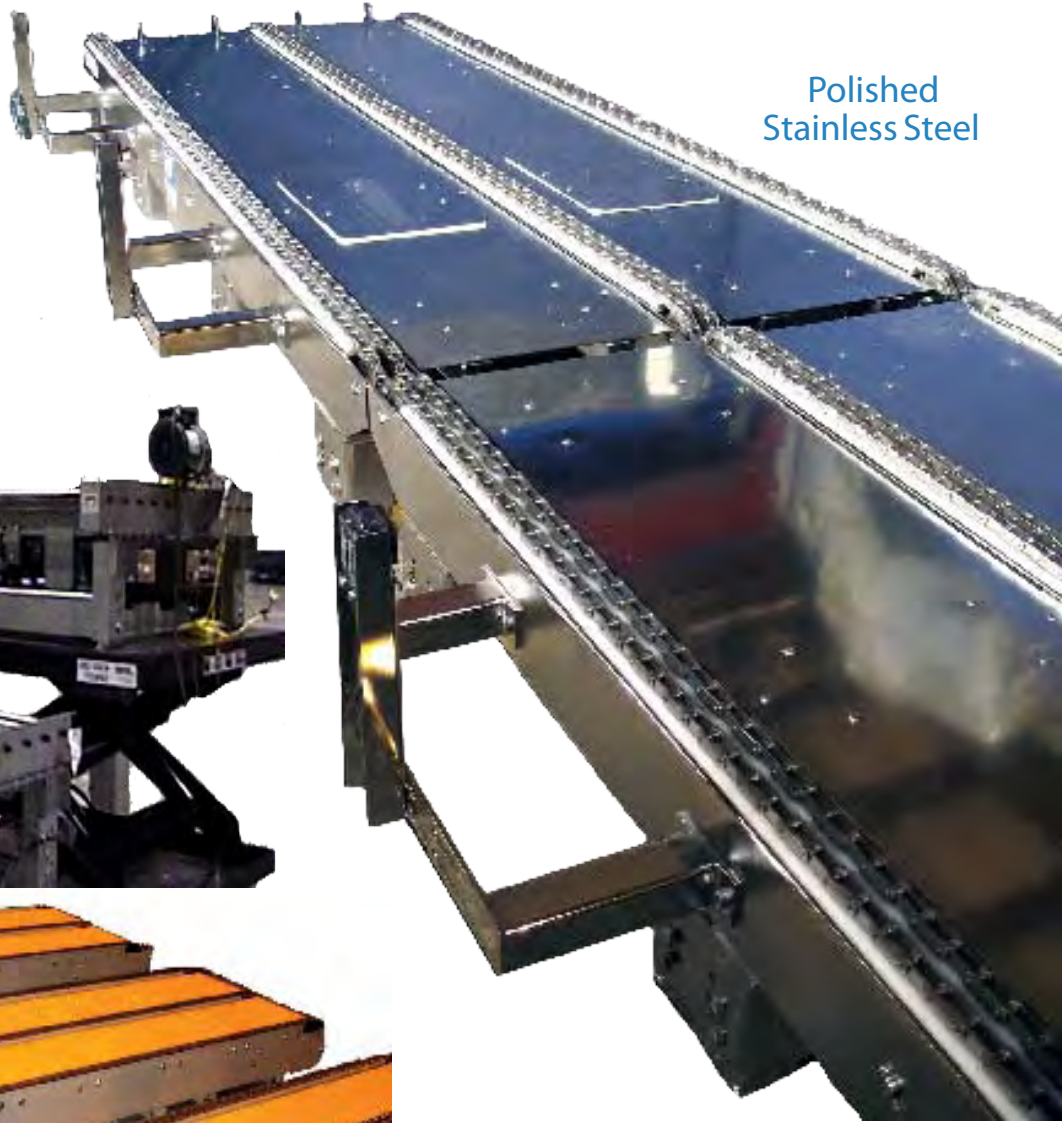


*CUSTOM
HANDLING
SOLUTIONS*

Custom Material Handling Equipment and Systems, designed and built to your application, all equipment available in Painted, Galvanized, or Stainless Steel construction, to suit your specific needs.

CDLR Conveyor

- Ideal for transporting pallets, drums, totes, and other heavy items.
- Roll-to-roll drive for more positive movement
- Heavy duty frame and support leg construction
- Available with 1.9", 2-1/2", & 3-1/2" roller diameters.

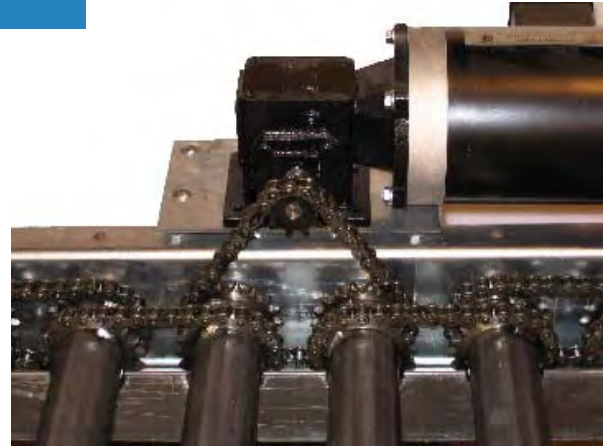


Pallet Dispenser/Stacker



- Unlimited Pallet Magazine size.
- Dispense or Stack Pallets with a single unit.
- Accepts a range of pallet dimensions and tolerances.
- Hydraulic or pneumatic operation available.

Turntable


Right Angle Transfer

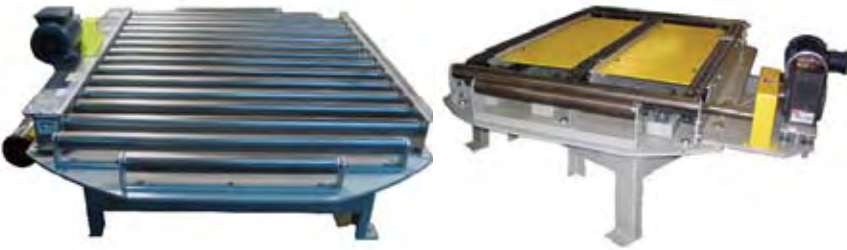

- Available in Roller or Chain configurations.
- Variable Rotation positions.
- Adjustable stop
- Electric motor, pneumatic or hydraulic rotation actuation



Chain Conveyor

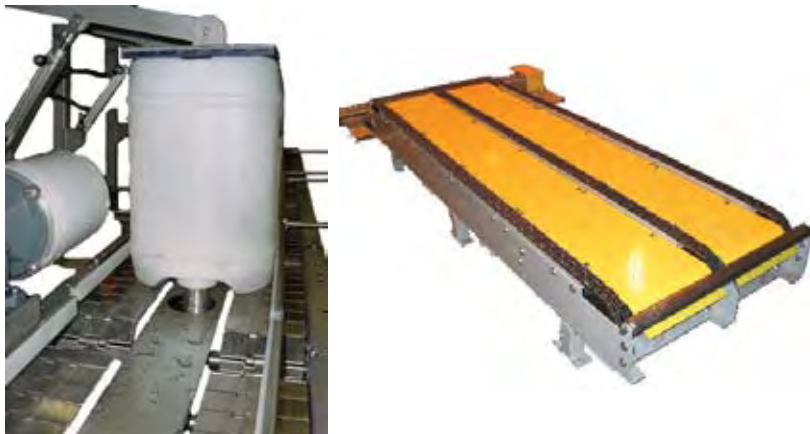


- Multiple Strands based on product design.
- Drag Chain and Tabletop styles available.
- Can be integrated with other style conveyors and automation in system configurations.

- Integral design fits into Roller Conveyor.
- For right angle transfer where a turntable is not practical, or pallet re-orientation is not required.

Transfer Car

- Chain and Roller Configurations available.
- Modular track construction for future expansion.
- Unlimited stop positions within confines of trackwork.

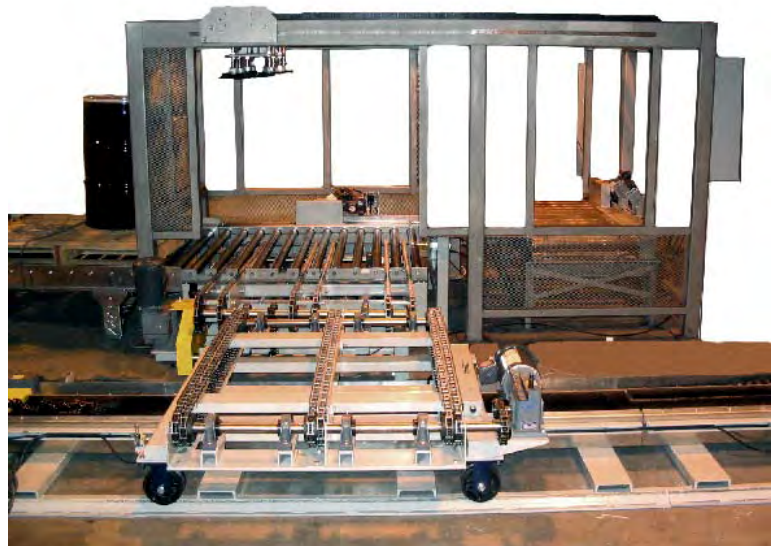

Tabletop Chain Conveyor

Carbon Steel or Stainless Steel frame, with a wide variety of commercially available chains. Custom side guides available per specification.



Conrols

Customize your systems with controls by InterSystems. We will provide controls and programming for your entire system, integrating and interfacing with peripheral equipment. PLC based controls utilize Micrologix controllers as standard. Customize with PanelViews and touch screens.



Slider Bed Belt Conveyor

Standard PVC non-slip belt, widths up to 27" as standard. Unique design allows for height adjustment during installation. Roller bearing belt return. Non-standard widths available.



Peripheral Equipment

Ask us about adding peripherals to your system. We can add a Velcon drum or pail filler or in-line weighing with ease.



intersystems

9575 N 109th Ave • Omaha, NE USA 68142
800.228.1483 or 402.330.1500
Fax 402.330.3350
filling@intersystems.net



www.intersystems.net

ICB - 08-1